




- 1** Clean and dry the walls for good adhesion. Remove the adhesive protection from the vertical profile that supports the roller cartridge and fix it to the wall.

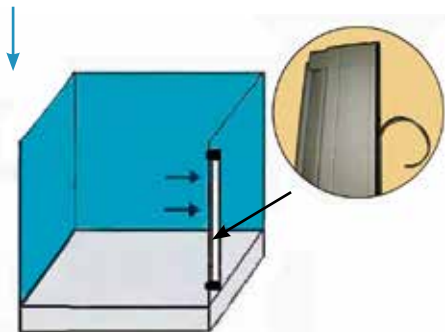


- 2** Position the vertical closing profile 2 as indicated in the image of the circle, with the L-shaped part facing out.

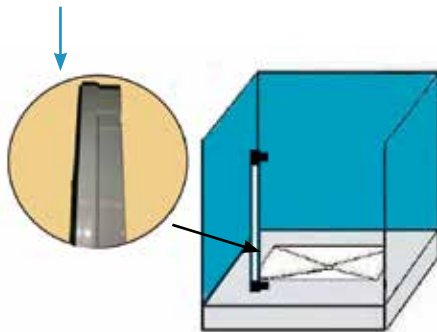

- 3** Remove the protection of the vertical closing profile and fix it on the wall.

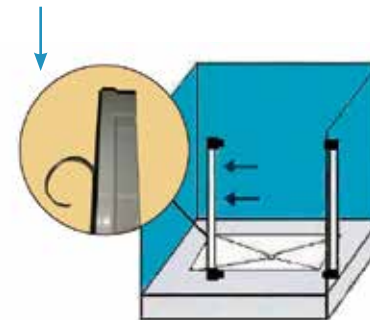


- 4** Extend the guides until they are inserted into their supports.

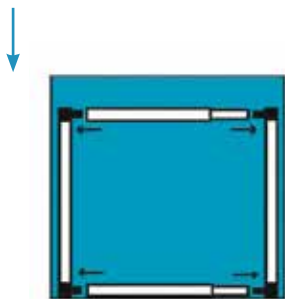

- 5** Insert the guide into the corresponding support at the same time as the wheel.



- 6** Use an Allen key 2.5 mm to tighten the screws that hold the guides, with little pressure to avoid causing deformation in the aluminum.

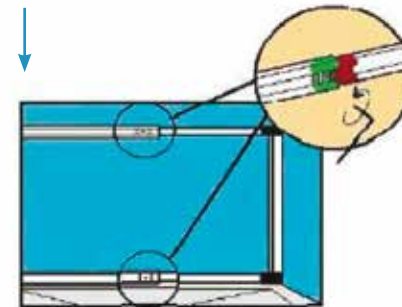

INSTRUCTIONS FOR USE



1. To close the door:
Place the locking latch on the top of the plastic handle, as indicated in the picture.



2. Then slam the door. Once closed, place the locking latch as indicated in the picture until it stops at the closure.



3. To open the door:
Unlock the locking latch, placing it back on the top of the plastic handle, as indicated in the picture. Then open the roller door.

IMPORTANT NOTE:

A) FOR SHOWER TRAYS WITH PERIMETER RIMS: For a shower tray that has a perimeter flange or skirt higher than the sink, the screen will be installed on top of it. Once installed it is not necessary to seal the lower guide at all.

B) FOR COMPLETELY FLAT SHOWER PLATES WITHOUT PERIMETER RIMS: Seal the outer perimeter of the shower tray with silicone anti-mold, between the aluminum bottom guide and the shower tray.

MAINTENANCE:

- The screen incorporates a self-cleaning system in the roll-up box, and does not require manual cleaning.
- For general maintenance, use soap or mild detergents.